

PLASMA SPRAY PROCESSORS

Works Instruction

QF/QMS/02/30

Rev. 00

Date : 17/09/2023



Operations/Work/Job Activity covered by this assessment: Cutting Machine

Required Personal Protective Equipment (PPE) :



Safety glasses must be worn at times.



Long and loose hair must be contained.



Appropriate footwear with substantial uppers must be worn.



Close fitting/protective clothing to cover arms and legs must be worn.



Respiratory protection devices required.




Oil free leather gloves and spats must be worn.



Hearing protection must be used when using this machine.

1. Switch on the main supply (A)
2. Switch the power in the machine (B)
3. Mount the circular specimen in the vice and align with the circular blade, close the safety door.
4. Switch on the emergency button. (C)
5. Press the green button and the cutting knob (D).
It glows green.
6. Set the RPM knob to desired speed of cutting wheel (E)
7. With the help of lever (H), slowly bring the rotating wheel to the specimen.
8. Press the coolant button (G)
9. Start cutting the specimen by slowly lowering the lever.
10. After cutting the specimen fully, shift the right-hand side lever(H) to the upward position and then switch off the motor.
11. Switch 'OFF' the power button on the machine (B)
12. Switch 'OFF' main switch (A)

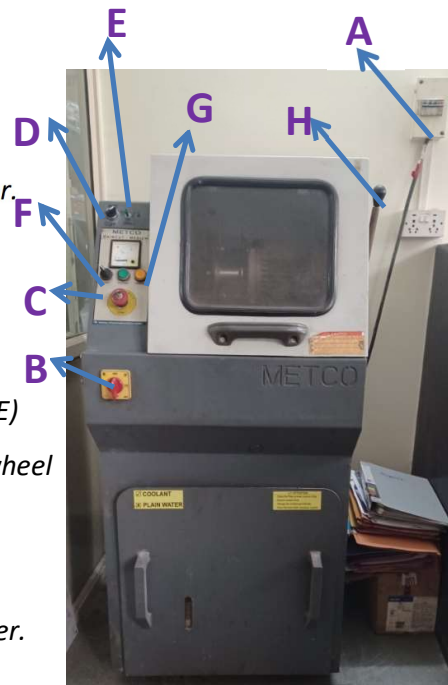

Assessor	Prasanna Wadkar	Signature:		Date:	
Approved:	Haarsh Doshi	Signature:		Date:	