

PLASMA SPRAY PROCESSORS

Works Instruction

QF/QMS/02/33

Rev. 00

Date : 18/09/2023



Operations/Work/Job Activity covered by this assessment: Polishing Machine

Required Personal Protective Equipment (PPE) :



Safety glasses must be worn at times.



Long and loose hair must be contained.



Appropriate footwear with substantial uppers must be worn.



Close fitting/protective clothing to cover arms and legs must be worn.



Respiratory protection devices required.



Oil free leather gloves and spats must be worn.



Hearing protection must be used when using this machine.


1. Keep a set of 80, 120, 180, 220, 320, 400, 600, 800, 1000, 1500 and 2500 grit emery paper ready for polishing
2. Keep one emery paper of Grit 120 on one wheel and Grit 180 on the other wheel.



Fig 1

3. Switch on the polishing machine and set the RPM of the motor to desired speed.
4. Wear Gloves on your hand before polishing.
5. Spray little water on the Emery of Grit 120 and press the mounted specimen with a little pressure and move it in the opposite direction to the wheel rotation.
6. Ensure that long axis of your specimen is perpendicular to the direction of rotation of the wheel as shown in Fig 2

Fig 2

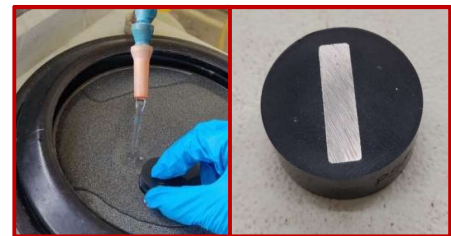

7. After 20-30 seconds, change the specimen so that its long axis is parallel to the rotation of the wheel. This is done by rotating the specimen 90 degrees to the earlier direction.

Assessor	Prasanna Wadkar	Signature:		Date:	
Approved:	Haarsh Doshi	Signature:		Date:	

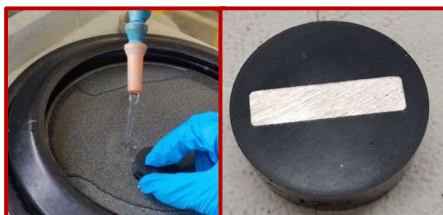


Fig 3

8. Ensure to cool the specimen by dipping it in water at regular intervals
9. Repeat Process detailed in 6 and 7 till the polished lines are parallel and uniform over the entire surface by observing visually the polished surface at frequent intervals.
10. Repeat processes from S.No.3 to S.No.8 for all emery paper Grit upto 2500.
11. After the final polishing and cleaning the surface of the mounted specimen with detergent, dry the specimen completely.
12. Identify the coated surface on the polished sample and place it accordingly on the stage of the microscope and focus it with 10X objective.
reaches 160⁰ C. Maintain the pressure.

Assessor	Prasanna Wadkar	Signature:		Date:	
Approved:	Haarsh Doshi	Signature:		Date:	